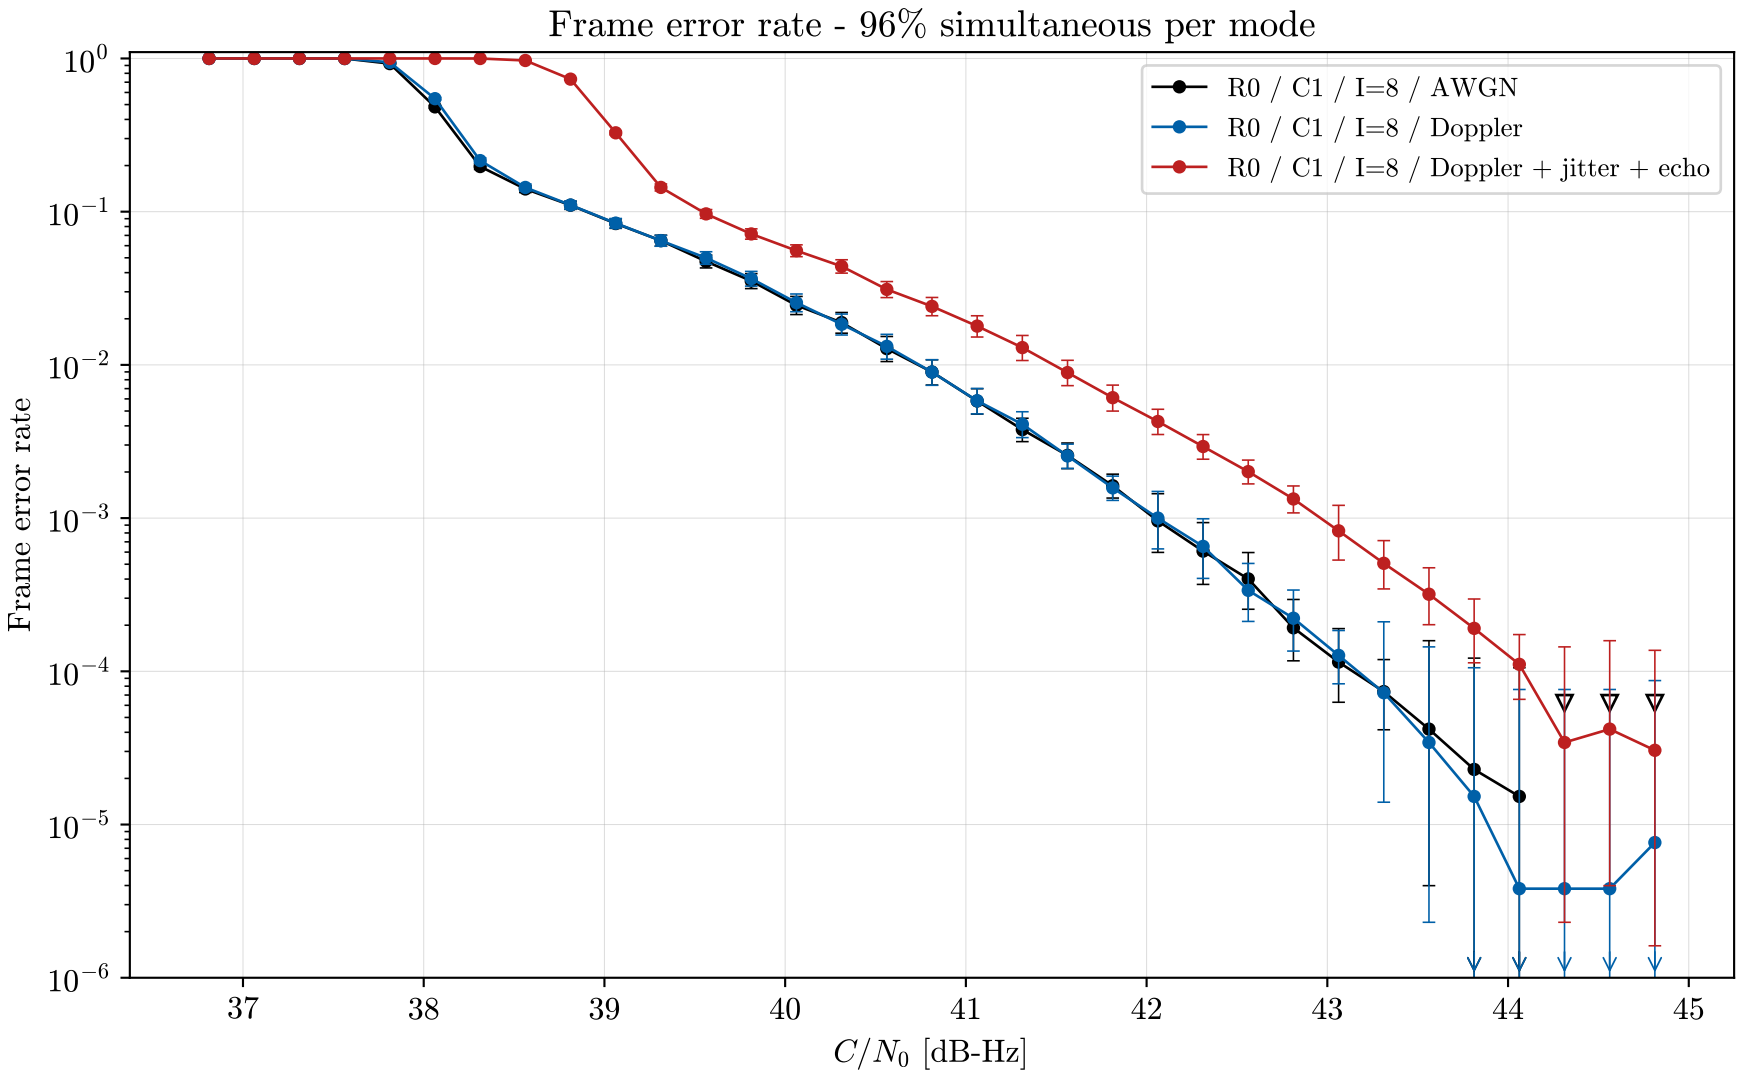


Open triangles: zero errors; height is the upper confidence bound.
Down arrows: lower bounds extend below the plot; exact bounds are tabulated.
Lines connect measured points only; no smoothing or interpolated confidence guarantee.